


# IGC 4n1 RTS RECEIVER

## Installation and Operating Instructions

### IGC 4n1 RTS RECEIVER

Part No.: 1811492

### Connections and Indicators

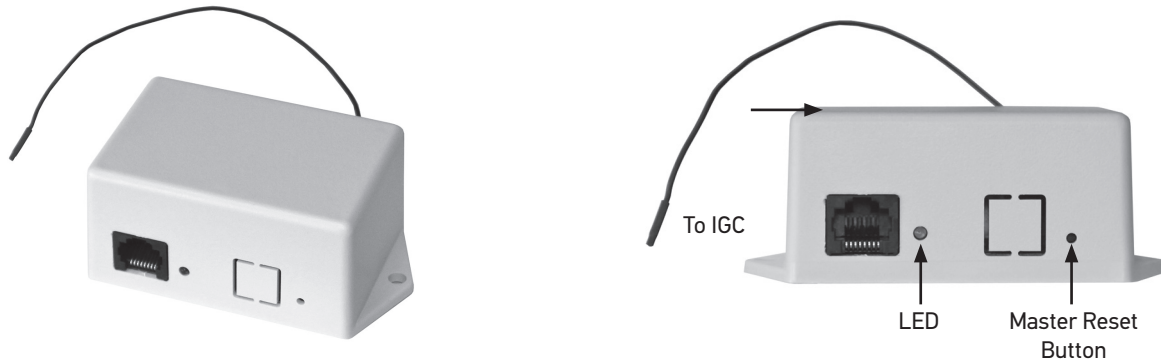

### Programming Procedure

1. **CONNECT** the RTS receiver to a Keypad Port or Master Port on the IGC 4n1 controller. The receiver's LED will be lit until a transmitter is programmed into memory.
2. **INITIAL PROGRAMMING:** To program the first transmitter or channel, press and hold the program button on an RTS transmitter (Telis or Decoflex WireFree™ Keypad) until the LED on the receiver turns off. Release the program button and the LED will light again. Press and release the program button on the same transmitter again and the LED will turn off and remain off. This transmitter is now memorized.
3. **PROGRAMMING ADDITIONAL TRANSMITTERS:** Press and hold the programming button on the transmitter that is already memorized by the RTS receiver until the LED on the receiver turns on. Press and release the program button on the new transmitter or channel. The LED on the receiver will turn off, indicating this transmitter has been memorized. Repeat this procedure for each transmitter or channel, up to 12 total.
4. **DELETING A TRANSMITTER FROM MEMORY:** Press and hold the programming button on the transmitter that is already memorized by the RTS receiver, but not the one to be removed from memory. Continue holding the button until the LED on the receiver turns on. Press and release the programming button on the transmitter or channel to be removed from memory. The LED on the receiver will turn off and that transmitter will no longer operate the RTS receiver.
5. **MEMORY RESET:** Press and release the reset button on the RTS receiver. The LED will turn on indicating that neither transmitters nor channels are memorized.
6. **OPERATION:** Pressing the UP button on the RTS transmitter will raise or retract the window treatment. Pressing the DOWN button will lower or extend it. Pressing the "my" button when the window treatment is in motion will STOP the window treatment and if the window treatment is stopped, move it to the motor's 2nd intermediate position.

**SOMFY SYSTEMS INC**  
**SOMFY NORTH AMERICAN HEADQUARTERS**  
121 Herrod Blvd., Dayton, NJ 08810  
P: (800) 22-SOMFY (76639)  
NJ: (609) 395-1300  
F: (609) 395-1776

**FLORIDA**  
6100 Broken Sound Pkwy. N. W.  
Suite 14, Boca Raton, FL 3487  
P: (800) 22-SOMFY (76639)  
F: (561) 995-7502

**CALIFORNIA**  
15291 Barranca Parkway  
Irvine, CA 92618-2201  
P: (800) 22-SOMFY (76639)  
F: (949) 727-3775

**SOMFY ULC**  
**SOMFY Canada Division**  
5178 Everest Drive Mississauga, Ontario L4W2R4  
P: (800) 66-SOMFY (76639)  
CN: (905) 564-6446  
F: (905) 238-1491

[www.somfysystems.com](http://www.somfysystems.com)

